

Petro 3003

Stručný návod na obsluhu

VOLUTANK

(Bez SAFE, s plnou hadicou, s úlomkami, s výberom skupiny)

Verzia softvéru PYRAMIDE 2.5.x

KBA 210619


PLEASE NOTE

This document is a short version of the product operation. It must be kept in the immediate vicinity of the device so that access to it is possible at any time.


To be observed safety and more detailed instructions, see the operation manual.

The current version can be downloaded from www.bartec.de or requested from BARTEC BENKE GmbH.


Nakladanie bez SAFE

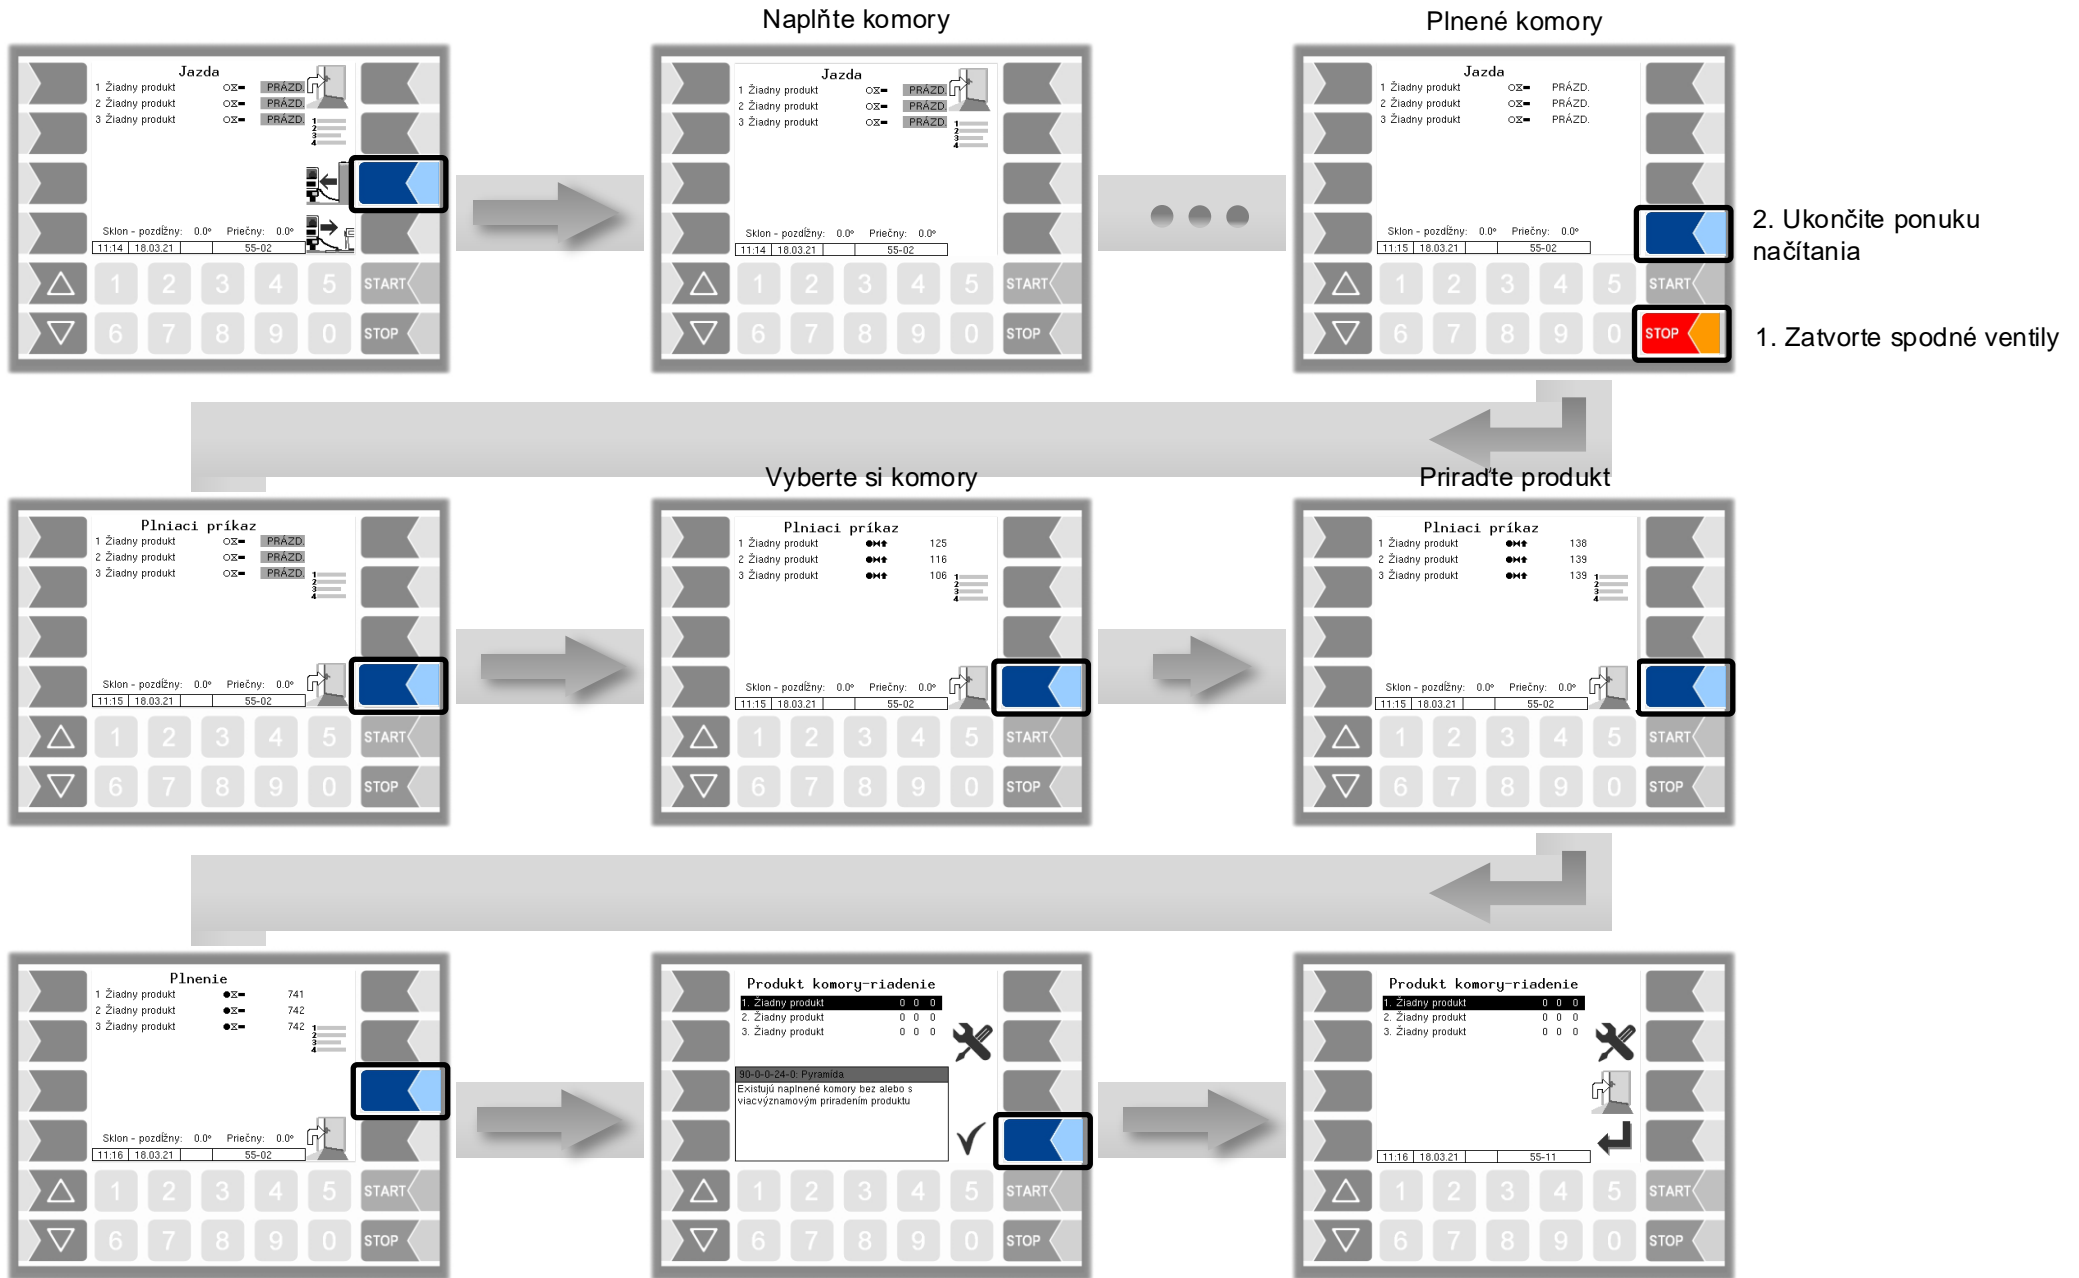


Nabitý výberom spoločnosti

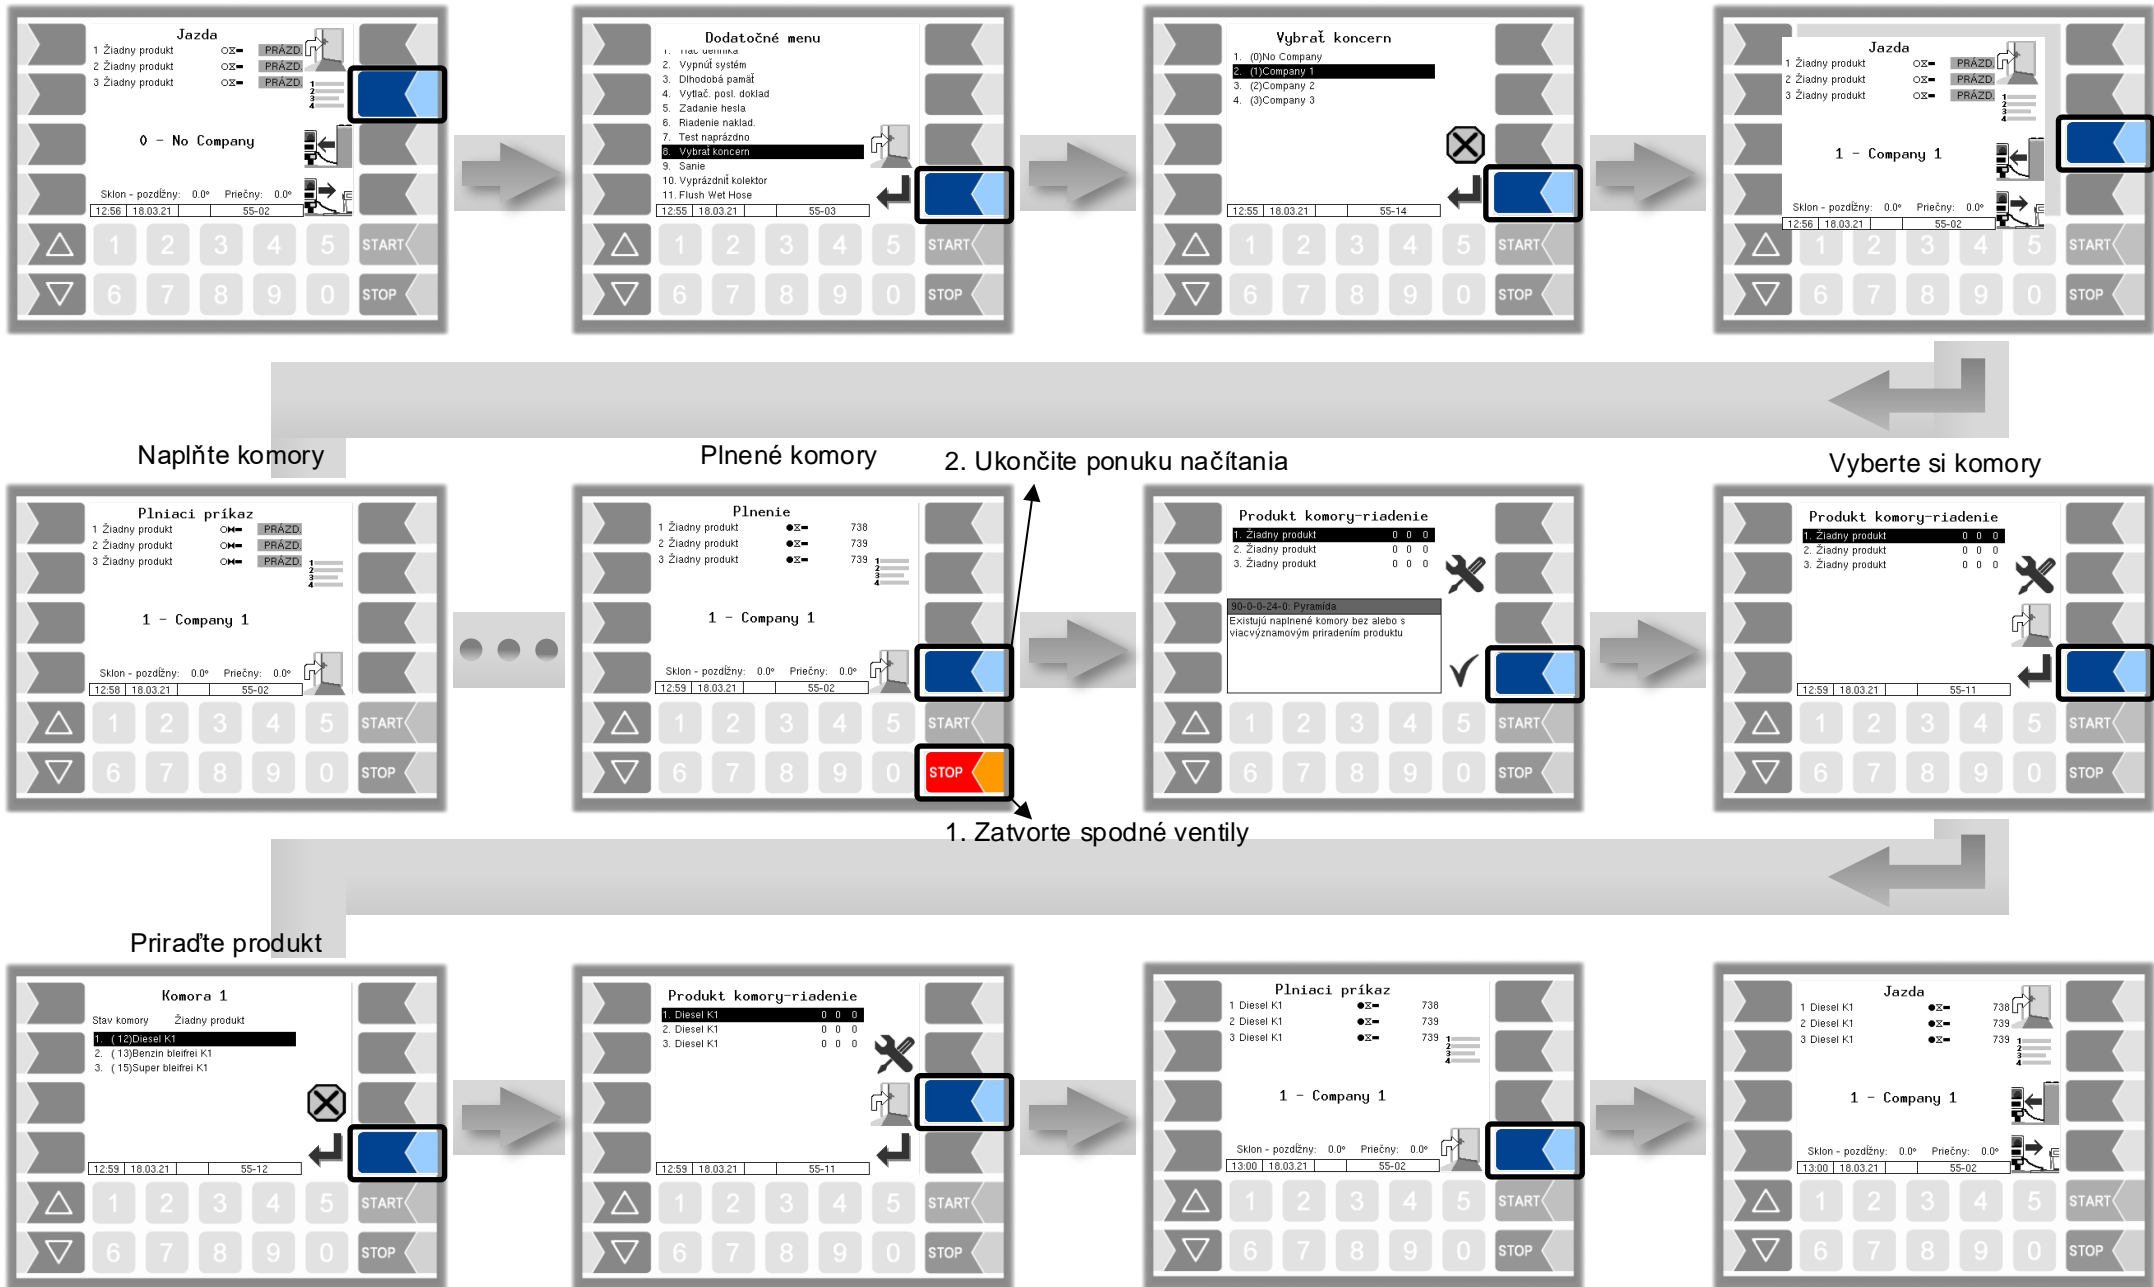

Dodanie bez SAFE

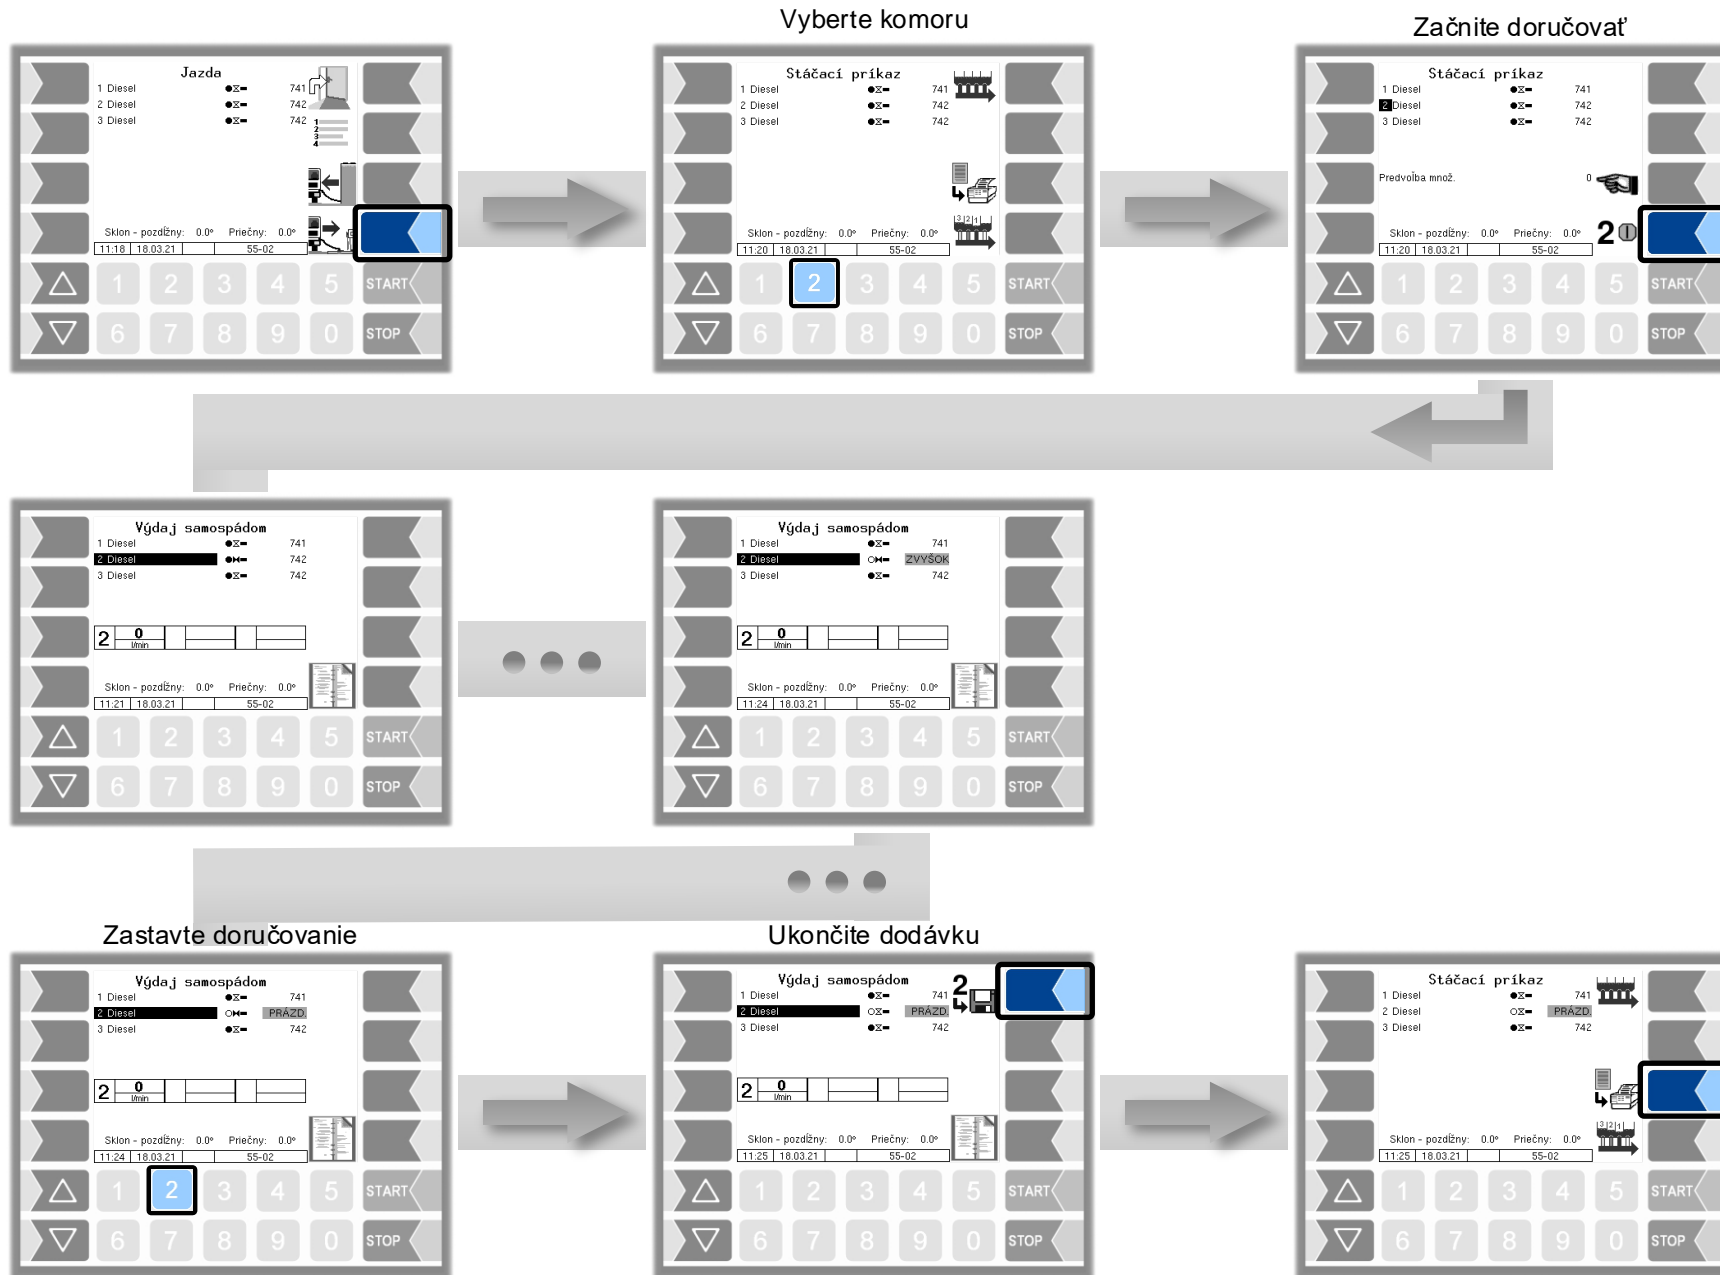


Plná dodávka hadice paralelne

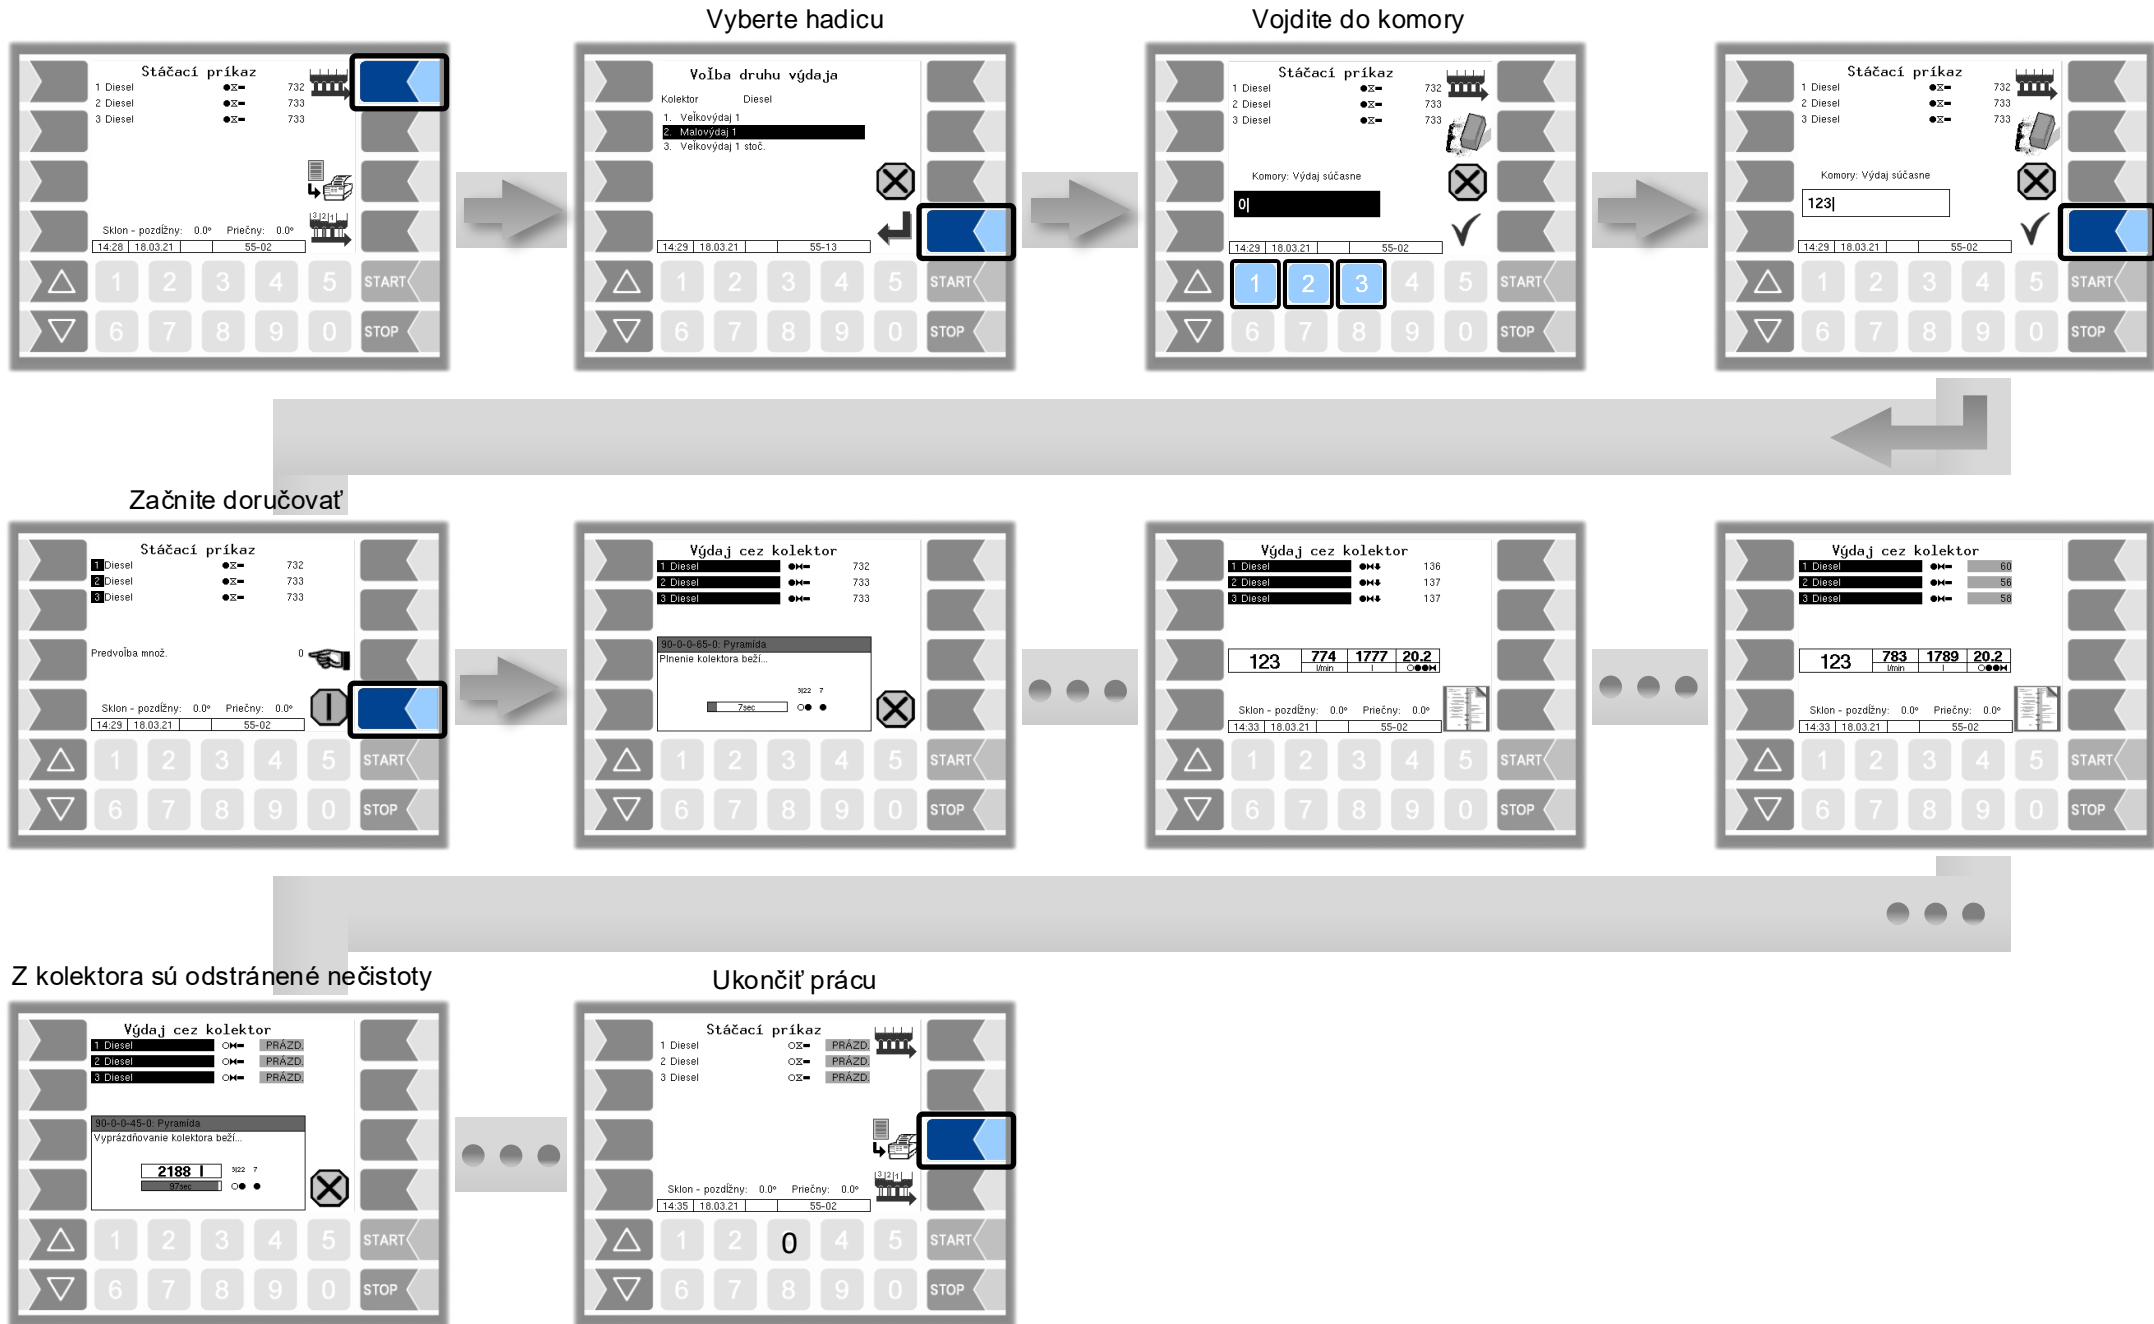


Sériové číslo dodávky celej hadice




Čiastočná dodávka plnej hadice

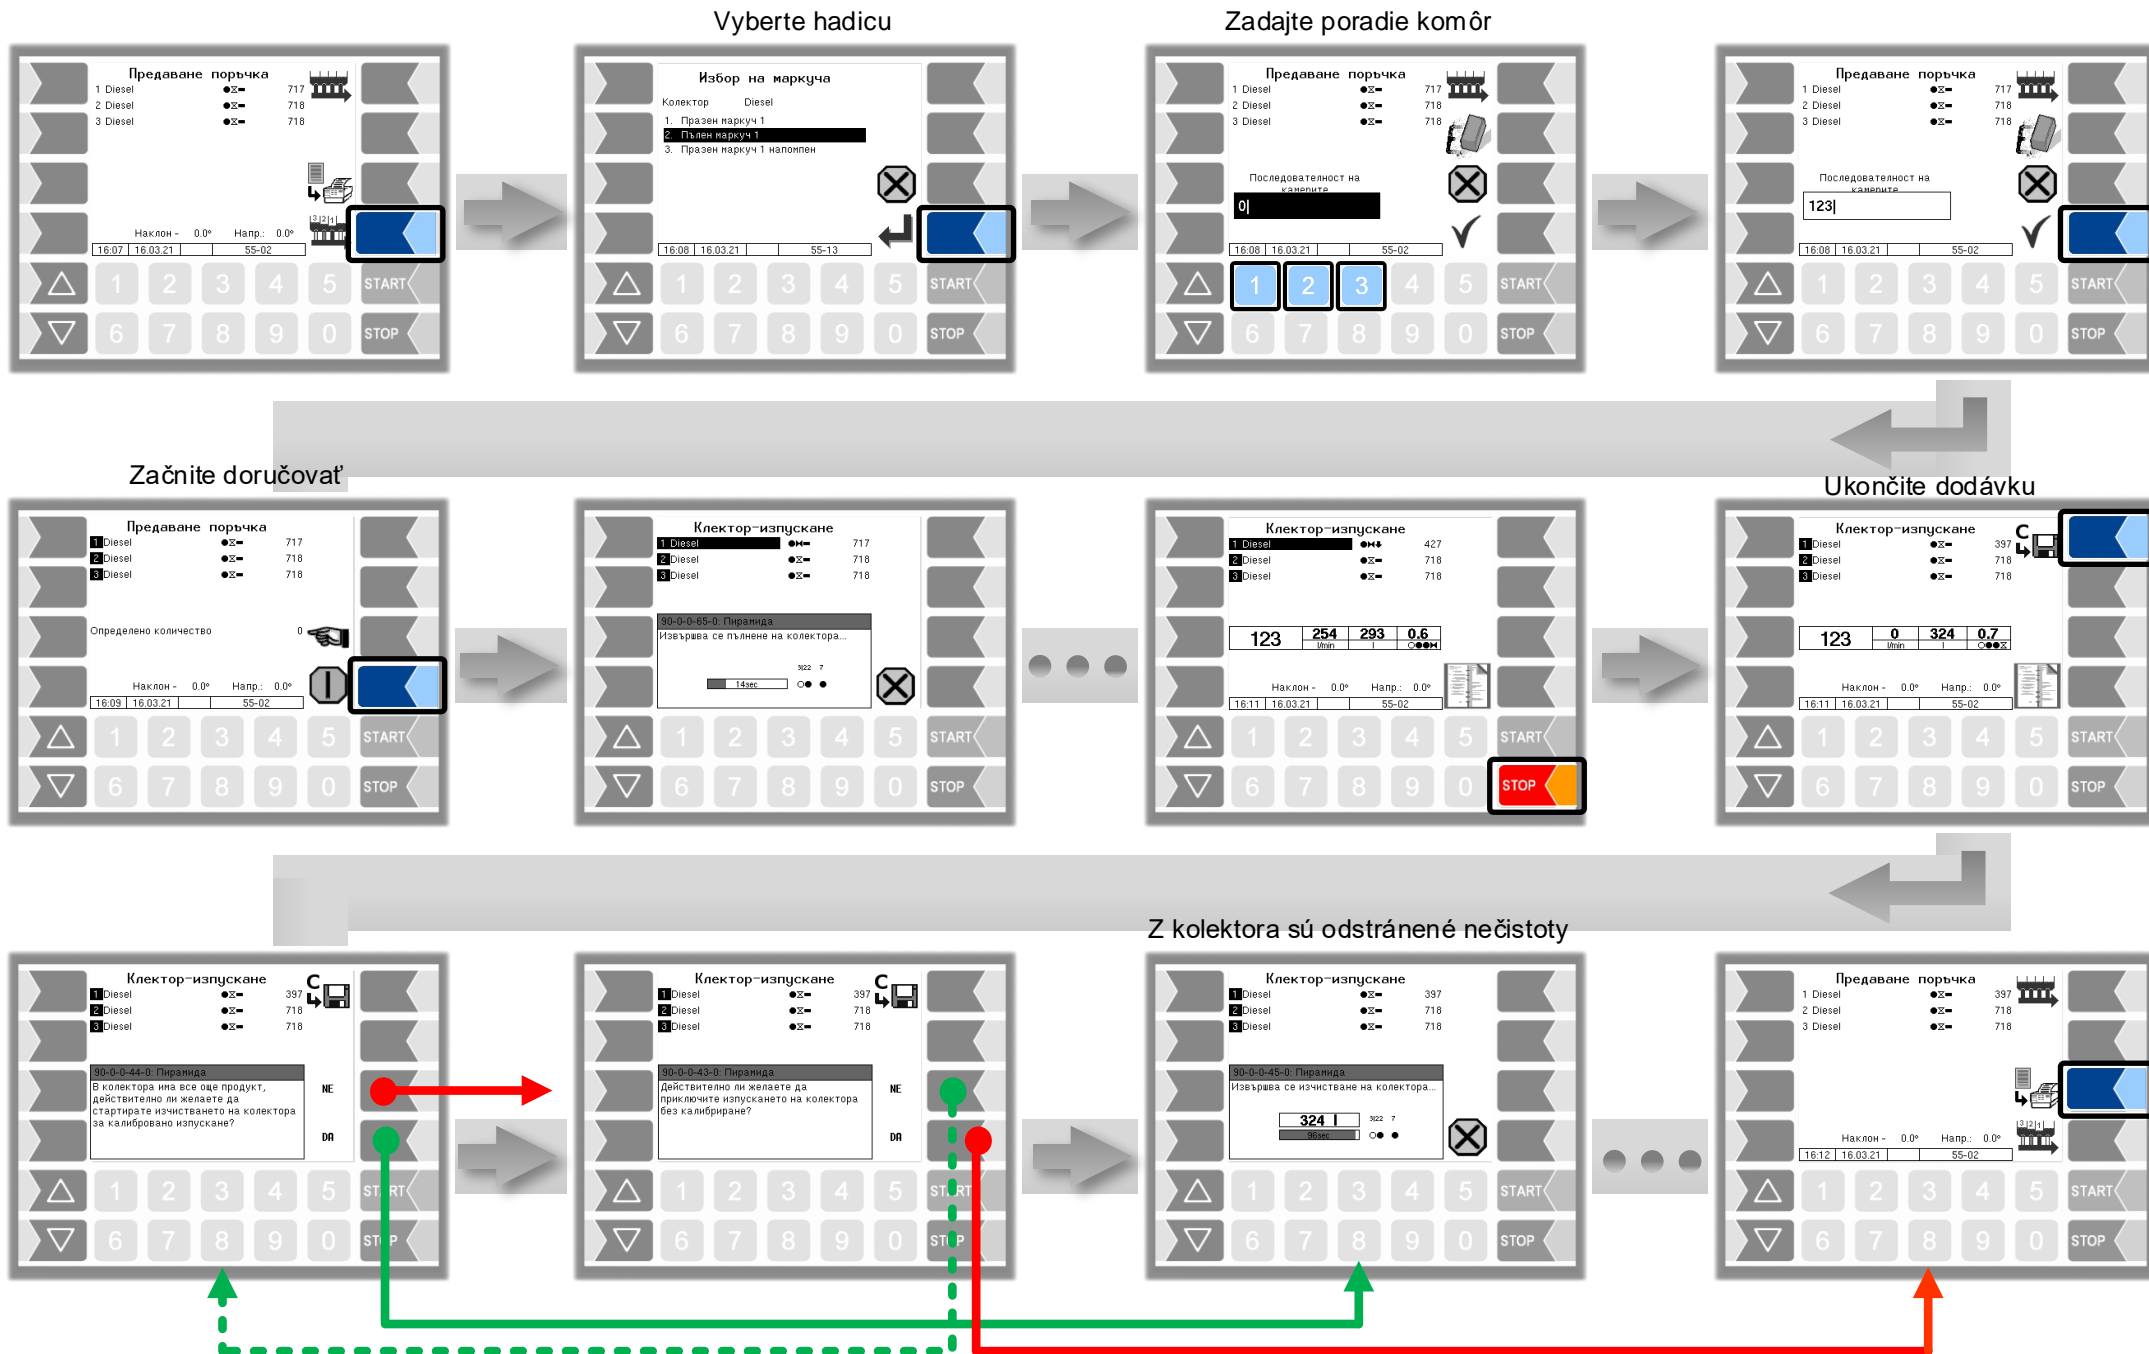

Trosky z kolektora

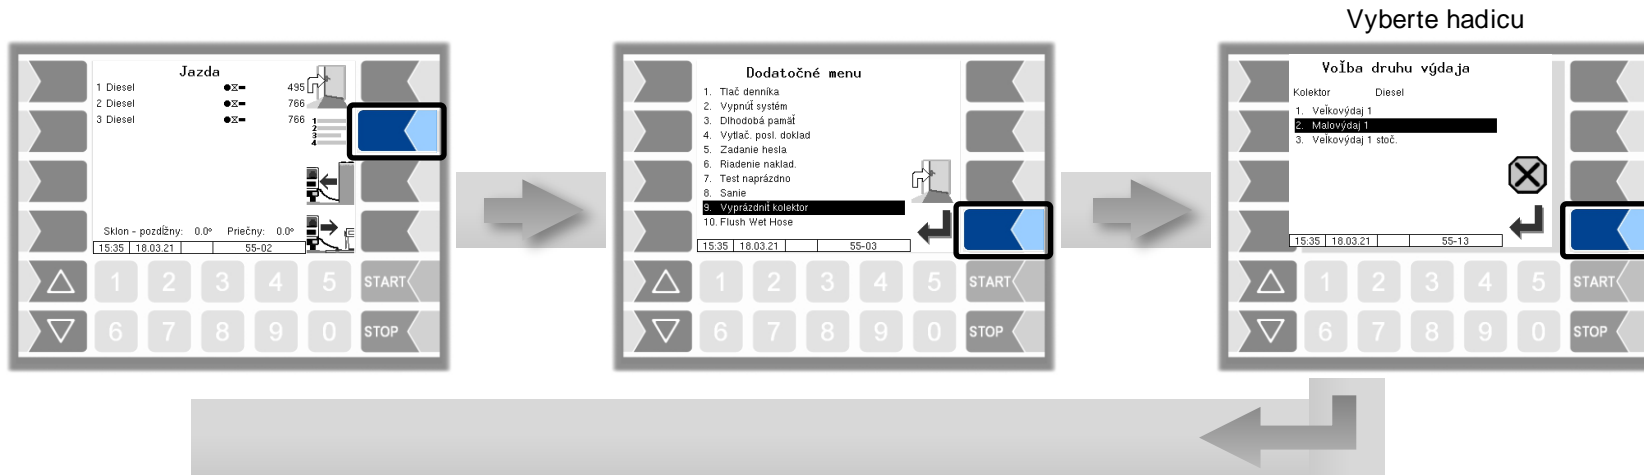

Z kolektora sú odstránené nečistoty

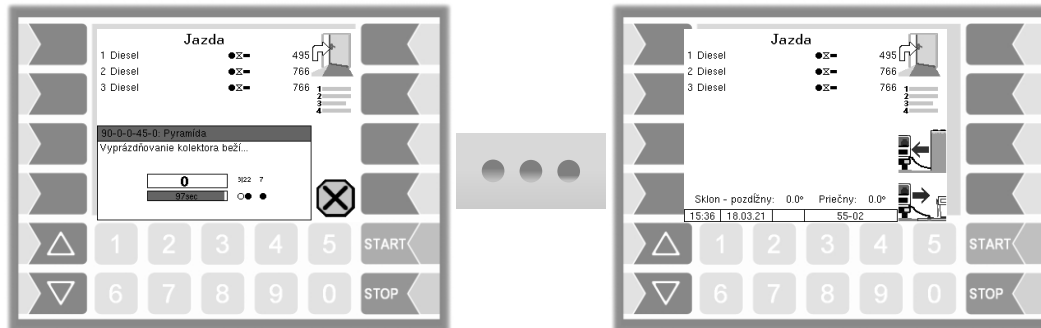

Prehľadové zobrazenie prevádzkových stavov

Číslo komory

výrobok

Uhol sklonu

Tour

1 Diesel	!⊗-	2830
2 Benzin 92	●⊗-	3351
3 Super bleifrei 95	●⊗-	2862

Neigung - Längs:-1.6°
Quer: 0.4°

08:07	10.01.12			55-02
-------	----------	--	--	-------

Hľadáte symbol
Prevenčia prepĺnenia
aktívna

Senzor zvyškového množstva	
○	nezmáčané
●	navlhčený
⊗	chyba

Spodné ventily	
⊗	zatvorené
⊗	otvorené

Čítania	
—	stabilný
~	nie stabilný
↑	zvyšuje
↓	padá
⊗	chyba

Stav komory	
LEER	Prázdny
REST	odpočívaj Hladina v nemerateľnom rozsahu, snímač zvyškového množstva nie je navlhčený (nevypršala doba nečinnosti).
60	Max. Možná zostávajúca suma Hladina v nemerateľnom rozsahu, snímač zvyškového množstva namočený.
2400	Momentálne meraný obsah komory